STRAIGHT AND CURL INSTRUCTIONS FOR USE

GB

Read the user's manual and the safety instructions carefully before using for the first time.

## GENERAL DESCRIPTION

A - On/off button
B - Temperature display using light diodes
C - + and - temperature switch
D - Ionic function on/off button
E - Ceramic coated straightening plates
F - 32 mm ceramic coated curling iron
G - Hair grip lever
H - Ceramic coated hair grip
I - "Straightening" or "curling" function switch
J - Swivel power cord
K - Stay cool tips
L - Appliance rest

## 1. SAFETY INSTRUCTIONS

- For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental…).
- The appliance's accessories become very hot during use. Avoid contact with the skin. Make sure that the supply cord never comes into contact with the hot parts of the appliance.
- Check that the voltage of your electricity supply matches the voltage of your appliance.
  Any error when connecting the appliance can cause irreparable harm, not covered by the guarantee.
- As an additional safety measure, we recommend the installation of a residual current difference device in the electrical circuit supplying the bathroom,acting at not more than 30 mA.Ask your installer for advice.
- The installation of the appliance and its use must however comply with the standards in force in your country.
- Caution : Never use your appliance with wet hands or near water contained in bath tubs, showers, sinks or other containers…
- When using the appliance in the bathroom, unplug it after use as the presence of water nearby may pose a danger even when the appliance is turned off.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Stop using your appliance and contact an Authorised Service Centre if:
- your appliance has fallen.
- it does not work correctly.
- The appliance must be unplugged:
- before cleaning and maintenance procedures.
- if it is not working correctly.
- as soon as you have finished using it.
- if you leave the room, even momentarily.
- Do not use if the cord is damaged.
- Do not immerse or put under running water, even for cleaning purposes.
- Do not hold with damp hands.
- Do not hold the appliance by the casing, which is hot, but by the handle.
- Do not unplug by pulling on the cord, rather pull out by the plug.
- Do not use an electrical extension lead.
- Do not clean with abrasive or corrosive products.
- Do not use at temperatures below 0°C and above 35°C.

## GUARANTEE:

Your appliance is designed for use in the home only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

## 2. USING FOR THE FIRST TIME

Your appliance heats up very quickly and the temperature remains stable throughout use:

- Plug the device in.
- Press the on/off button (A) for 2 to 3 seconds
- Wait for just 1 minute, your appliance is ready to use.
- Select the ideal temperature for your hair by using the "+" and "-" temperature switch (C)
- You can activate the Ionic function by pressing the corresponding button (D). The button lights up when the function is activated.
- To turn off, press the on/off button (A) for 2 to 3 seconds
- After use, unplug the appliance, place it on a heat-resistant, flat, stable surface and leave it to cool down completely before putting it away.

## 3. USE

Your hair must be DRY, clean and tangle free to avoid damaging it.
Do not use the appliance on synthetic hair (wigs, extensions, etc.)

## I STRAIGHTENING FUNCTION

- Open up the straightening plates using the function selector switch (I).
- Take a small lock of hair a few centimetres wide, comb it and place it between the plates.
- Close the plates firmly and slide the appliance slowly down the length of hair from the root to the tip of the hair.
- You can adjust the temperature during the straightening process by using the + and – buttons (C).
- The ceramic coating of the plates protects your hair against excessive temperatures, by distributing the heat in a uniform manner.
- Wait until your straightened hair has cooled down before styling it.

*HAIRDRESSER'S TIP*

- *To avoid a stripy effect forming along the length of your hair, ensure your movement when straightening hair is smooth and continuous.*
- *To emphasise the effect, you can apply a hair styling mousse before straightening.*

## II-CURLING FUNCTION

- Close the straightening plates to obtain the curling iron function, using the function selector switch (I).
- Form a lock of hair 2 to 3 cm wide.
- Open the grip (H) by pressing down on the lever (G) and slip the tip of your hair between the tube and the grip.
- Release the grip (H) to close it.
- Check that the tip of your hair is rolled around the grip, in the direction of the curl.
- Use your other hand to support the stay cool tip (K).
- Turn the appliance in order to wind the lock of hair around the appliance.
- Carry on turning the lock of hair, moving up towards the scalp, taking care not to burn yourself.
- Keep the curling iron in this position for around 20 seconds (longer for tighter curls).
- Unravel the curling iron halfway and then open the hair grip by pressing down on the lever to release the hair.
- Repeat as often as necessary using a new section of hair to make new curls.

*HAIRDRESSER'S TIP*

- *To give more volume: you can divide the curls up with your fingers.*
- *To obtain very tight curls: only wind small sections of hair around the appliance at a time.*
- *For more wavy curls: wind bigger sections of hair around the appliance.*
- *To ensure the hair ends behave themselves: check that the ends are properly wound under the hair grip, in the direction of the curl.*
- *For a more natural wave result, after your curls have cooled down you can gently comb or brush your hair.*

*Leave your hair to cool down before styling it*

## 4. MAINTENANCE

- Unplug the appliance and leave it to cool down on a heat-resistant, flat, stable surface placed on its rest. (L).
- Only clean the appliance once it has cooled down completely.
- Wipe the handle using a gentle damp cloth.
- Never introduce water or any other liquid into the handle.

## 5. ENVIRONMENT PROTECTION FIRST!

ⓘ Your appliance contains valuable materials which can be recovered or recycled.
➲ Leave it at a local civic waste collection point.

Rowenta

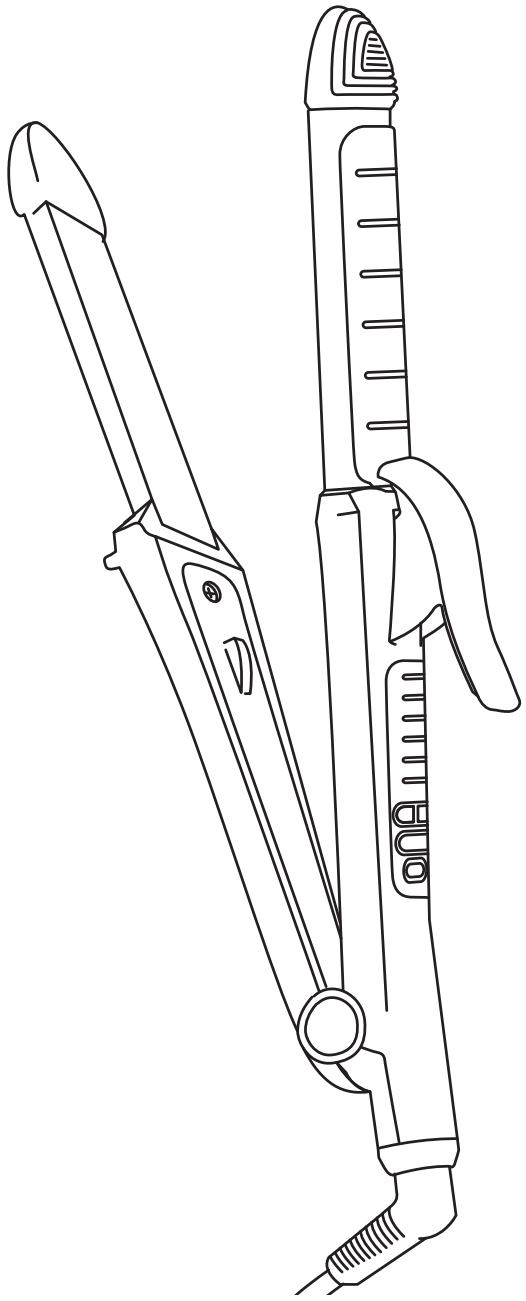

1800113811/22-08 CF7270

**제품을 사용하기 전에 안전상 주의 사항과 사용 설명서를 주의 깊게 읽어주십시오.**

KO

**각부 명칭**
A. 전원 버튼
B. 전자 온도 표시 창
C. 온도 조절 스위치
D. 이온 기능 버튼
E. 세라믹 코팅 스트레이트 열판
F. 32mm의 세라믹 코팅 컬링 아이론
G. 컬링 아이론 집게 조절 손잡이
H. 세라믹 코팅의 아이론 집게
I. "스트레이트닝" 또는 "컬링" 기능 선택 스위치
J. 회전식 코드
K. 플라스틱 절연 끝부분
L. 지지대

**1. 안전상 주의사항**
- 본 제품은 안전을 위해 현재 시행중인 표준 법규 및 기술 법규(저 전압 지침, 전자 환경 양립성, 기타 환경 요소..)를 따른 것입니다.
- 제품 사용 중에는 제품의 손잡이 외에는 뜨거우므로 피부에 닿는 것을 주의하십시오. 전원 코드는 절대 전열 제품 가까이에 두지 마십시오.
- 사용 전압이 제품에 표기된 전압과 일치하는지 확인하십시오. 표기되지 않은 전압 사용시 제품에 발생하는 문제는 매우 치명적이며 품질 보증 혜택을 받을 수 없습니다.
- 추가 안전을 위하여 30mA 이하의 전기 차단기를 욕실 전원에 설치하실 것을 권장합니다. 보다 자세한 사항은 전기 전문가에게 문의하십시오.
- 나라마다 서로 다른 전기 전압 기준이 시행되므로 사용하는 나라에 따라 이에 대한 사항을 확인바랍니다.
- 욕실에서 사용하신 후에는 반드시 전원 플러그를 뽑아 주십시오. 욕실에서는 제품의 전원이 차단된 경우에도 근접한 물기가 위험을 유발 할 수 있습니다.
- 주의: 젖은 손이나 물이 차있는 욕조 근처, 세면대 또는 물이 담긴 용기 근처에서 기기를 절대 사용하지 마십시오.
- 감독이나 관리 없이 어린이나 몸이 불편하신 분이 사용하지 않도록 주의하십시오. 어린이들이 제품을 가지고 장난치지 않도록 주의 깊게 지켜봐 주십시오.
- 전원 코드가 손상되었을 경우에는 위험이 생기지 않도록 반드시 당사 서비스 센터를 통해 전원 코드를 교체해야 합니다.
- 다음과 같은 경우에는 절대 제품을 사용하지 마시고 당사 서비스센터에 문의하십시오.
- 제품을 떨어뜨렸을 경우
- 제품이 제대로 작동되지 않는 경우
- 다음과 같은 경우에는 전원을 분리하십시오.
- 제품 보관 및 세척 전
- 제품이 제대로 작동되지 않는 경우
- 부재시 (짧은 시간 동안의 경우에도)
- 전원 코드가 손상되었을 경우에는 제품을 사용하지 마십시오.
- 제품을 물에 담그거나 흐르는 물로 세척하지 마십시오.
- 물기 있는 손으로 제품을 사용하지 마십시오.
- 제품의 뜨거운 열판 부분이 아닌 손잡이 부분으로 제품을 잡아 주십시오.
- 전원 코드를 잡아당겨 콘센트를 빼지 마시고 전원 플러그를 잡고 빼 주십시오.
- 전원 연장 코드를 사용하지 마십시오.
- 연마제나 부식제를 사용하여 세척하지 마십시오.
- 0°C 이하 35°C 이상의 기온에서는 사용하지 마십시오.

**품질 보증**
이 제품은 가정용으로 제작 되었으므로 상업용 또는 부적절하게 사용된 경우 당사의 품질보증 혜택을 받으실 수 없습니다.

**2. 제품 작동 방법**
본 제품은 빨리 뜨거워집니다. 한번 제품의 온도가 올라간 후에는 사용하는 동안 온도가 유지됩니다.
- 제품의 전원 플러그를 꼽으십시오.
- 2초에서 3초 동안 전원버튼(A)을 누르십시오.
- 1분 정도 지나면 제품 사용 준비가 완료되었습니다.
- 모발에 알맞은 온도를 고저온 온도 조절기(C)로 조절하십시오.
- 이온 기능 버튼(D)을 눌러 버튼에 불이 들어온 경우 이온 기능이 작동합니다.
- 전원을 끄기 위해서는 제품의 전원버튼(A)을 2초에서 3초 정도 누르십시오.
- 제품을 사용한 후에는 반드시 전원 플러그를 뽑고 제품이 완전히 식은 후 보관하십시오.

**3. 제품 사용 방법**
제품의 안전한 사용을 위해 깨끗하고 건조된 상태(또는 약간 젖은 상태)의 모발로 엉키지 않은 상태이어야 합니다. 제품을 인조 모발에 사용하지 마십시오.

**I- 스트레이트 기능**
- 기능 선택 스위치(I)로 스트레이트 기능으로 조절하여 스트레이트 열판을 열어두십시오.
- 모발 2~3cm 가량 잡은 후 고르게 빗어 열판 사이에 넣어 주십시오.
- 열판 사이에 있는 모발을 단단히 잡은 후 천천히 모발의 뿌리 부분부터 끝까지 당겨 주십시오.
- 스트레이트닝 중에 온도 조절기(C)로 모발에 알맞은 온도로 조절이 가능합니다.
- 세라믹 코팅 열판은 열의 분배를 균일하게 하여 과다한 열로부터 모발을 보호합니다.
- 모발이 식을 때까지 기다렸다가 원하시는 머리 스타일로 스타일링하십시오.

*전문가의 조언*
- 모발이 엉키지 않도록 동작을 부드럽게 안쪽 모발에서 끝까지 지속하십시오.
- 더욱 효과적인 연출을 위해 제품 사용 전 무스와 같은 헤어스타일링 제품을 함께 사용하실 수 있습니다.

**II- 컬링 기능**
- 기능 선택 스위치(I)로 컬링 기능으로 조절하여 스트레이트 열판을 닫아두십시오.
- 모발을 2~3cm 가량 잡으십시오.
- 아이론 집게 손잡이(G)를 눌러서 집게(H)를 열어준 후 모발의 끝부분을 아이론과 집게 사이에 넣어 주십시오.
- 집게(H)를 닫으려면 눌러진 아이론 집게 손잡이를 풀어주면 됩니다.
- 모발의 끝부분이 집게 안에서 컬의 방향으로 제대로 말렸는지를 확인해 주십시오.
- 다른 손은 플라스틱 절연 끝부분(K)을 잡으십시오.
- 아이론에 모발을 감으려면 기기를 돌려 주십시오. 화상을 입지 않도록 조심하여 모발을 모발의 뿌리 방향으로 올라 감아가며 말아 주십시오.
- 위의 동작 상태에서 약 20초 동안 아이론을 멈춰 기다려 주십시오. (컬이 타이트하게 더 곱슬거리길 원하면 더 오랫동안 기다리십시오.)
- 아이론을 반정도 풀어주고 머리카락이 미끄러지도록 집게를 열어 주십시오.
- 남은 부분의 컬을 위해 위의 동작을 반복하십시오.

*전문가 조언*
- 더욱 효과적인 볼륨을 원한다면 컬을 손가락으로 나눠주십시오.
- 매우 타이트한 컬을 원한다면 모발의 섹션을 아주 소량으로 나누어 말아주십시오.
- 더욱 흘러내리는 웨이브를 원한다면 모발의 섹션을 크게 나누어 말아주십시오.
- 모발의 끝이 뻗치는 것을 방지하려면 모발이 집게 아래에서 컬의 방향으로 끝까지 잘 말렸는지 확인하십시오.
- 더욱 자연스러운 컬을 원한다면 컬이 식기를 기다렸다가 모발을 브러시나 빗으로 빗어주십시오.
  모발이 식을 때까지 기다렸다가 원하시는 머리 스타일로 스타일링하십시오.

**4. 보관 방법**
- 제품의 플러그를 뽑은 후 안정적이고 평평한 장소에서 제품이 식기를 기다리십시오.
- 제품이 완전히 식은 후 세척하십시오.
- 부드럽고 축축한 천으로 손잡이를 닦아주십시오.
- 손잡이 안에 절대 물 또는 다른 액체들을 넣지 마십시오.

**5. 환경 보호**

ⓘ 본 제품은 재활용이 가능한 부속품들을 포함하고 있습니다.

➲ 환경 보호를 위해 분리 수거해주십시오.

만약 제품의 이상이 있거나 문의가 있으시면 당사 서비스 센터로 연락하십시오.
A/S문의: 1588-1588 대우일렉서비스 (전국 어디서나)